



Position	Spare parts	Part number
1	Inverter board	033093010000
2	PC board (Heat&Cool)	033090151000A78s
3	Touch controller with built-in wifi	034092180001
4	Contactor (3 phase relay)	033990130000
5	Capacitor (3 phase)	041020350000
6	Power filter plate	033090650000
7	Capacitor plate (3 phase)	033091500000
8	Reactor (big)	041301060000
9	Reactor (small)	041301070000
10	Water pump contactor (3 phase)	040020020000
11	Electronic expansion valve	006121100001
12	4-way valve	006110160001
13	Water flow switch	040060620000
14	Fan motor	032051720000
15	Full set of sensors	Z35043000400
16	Compressor	031064030000
17	Titanium heat exchanger (Heat&Cool)	001030680003
18	Evaporator	Z01011140000
19	High pressure protection switch	040050630000
20	Low pressure protection switch	040050130000
21	Low Pressure valve	006080500000
22	Liquid reservoir	006090040000
23	Water union (Black, 50mm)	003990020000
24	Water union gasket	004980050002
25	Fan	007010080000
26	Drainage kit	Z03991700000
27	Compressor insulation cap	004041700000
28	Top cover	002020650915
29	Front Panel	0020206505P1
30	Right Up Panel	002020653715
31	Right Down Panel	0020206512P1
32	Back Panel	0020206538P1
33	Bottom board	002020655000
34	Pole	0020206506P1
35	Left mesh board	0020206520P1