



Position	Spare parts	Part number
1	Integrated board (Heat&Cool)	2005030200058A48
2	Oval touch controller	2005020900011
3	Power filter plate	033092340000
4	Reactor (big)	041301100000
5	Electronic expansion valve	006121010001
6	4-way valve	006110210001
7	Water flow switch	040060620000
8	Fan motor	032051700000
9	Full set of sensors	Z35043000400
10	Compressor	031064060000
11	Titanium heat exchanger (Heat&Cool)	2001020100150
12	Evaporator	1202010200131
13	High pressure protection switch	040050630000
14	Low pressure protection switch	040050130000
15	Low Pressure valve	006080500000
16	Liquid reservoir	1203020300010
17	Water union (Black, 50mm)	003990020000
18	Water union gasket	004980050003
19	Fan	007010070000
20	Drainage kit	Z03991700000
21	Top cover	1220020103701
22	Front Panel	1220020302232
23	Right Up Panel	1220020302236
24	Back Panel	1220020302235
25	Bottom board	1220020103702
26	Back mesh board	1220020302234
27	Left mesh board	1220020302233