



Position	Spare parts	Part number
1	Inverter board	2005030100102
2	PC board (Heat&Cool)	2005130100151A56s
3	Oval touch controller	2005020900011
4	Contactora (3 phase relay)	033990120000
5	Capacitor (3 phase)	041020250000
6	Power filter plate	033092370000
7	Reactor (big)	041301110000
8	Electronic expansion valve	2002010200030
9	4-way valve	2002010100014
10	Water flow switch	040060620000
11	Fan motor	032051640000
12	Full set of sensors	Z35043000400
13	Compressor	1201010300043
14	Titanium heat exchanger (Heat&Cool)	2001020100153
15	Evaporator	1202010200154
16	High pressure protection switch	040050630000
17	Low pressure protection switch	040050130000
18	Low Pressure valve	006080500000
19	Liquid reservoir	1203020300001
20	Water union (Black, 50mm)	003990020000
21	Water union gasket	004980050003
22	Fan	007010120000
23	Drainage kit	Z03991700000
24	Top cover	1220020104537
25	Front Panel	1220020302244
26	Right Up Panel	1220020302783
27	Back Panel	1220020302880
28	Bottom board	1220020104516
29	Back mesh board	1220020302891
30	Left mesh board	1220020302245