
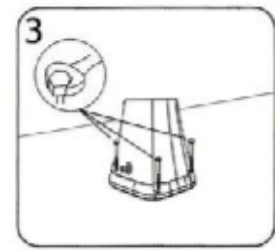
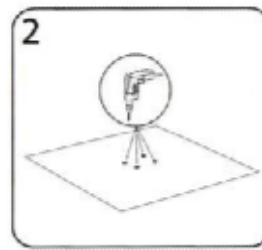
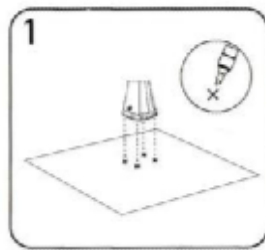


## СОЛНЕЧНЫЙ ДУШ / SUNNY SHOWER

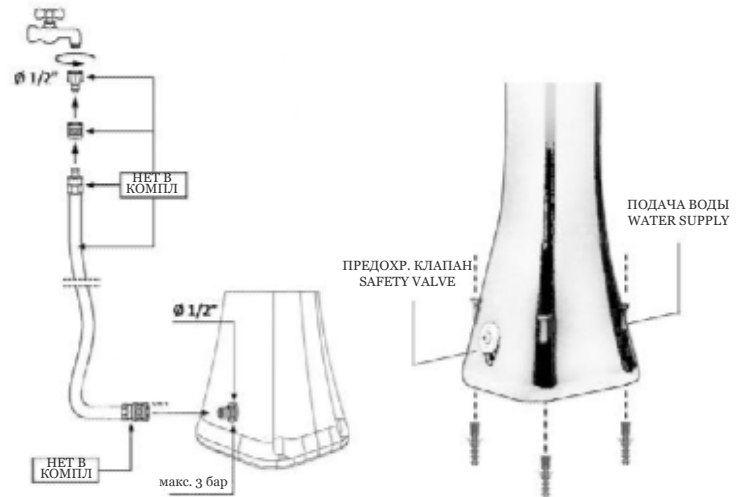

### ВНИМАНИЕ

В районах, где температура воздуха опускается ниже 3°C, обязательно сливайте воду из бака, чтобы предотвратить повреждения в результате заморозков!

### ATTENTION

In areas where the external temperature drops below 3°C, make sure to drain the tank, to avoid damages caused by frost!

### РУС - УСТАНОВКА

1. Выберите подходящее место, куда попадают прямые солнечные лучи, рядом с водопроводом и канализацией.
2. Установите насадку для душа, закрепив ее на корпусе душа.
3. В твердой поверхности (цемент, железобетон или тяжелое деревянное основание) просверлите 4 отверстия диаметром 12 мм и глубиной 70 мм, в качестве ориентира используйте крепежные отверстия в основании душа.
4. Вставьте анкеры и закрепите солнечный душ в вертикальном положении с помощью шайб и винтов.
5. Подключите к водопроводу. При необходимости используйте адаптер.
6. Самовывоз с завода.

### ПЕРВОЕ ИСПОЛЬЗОВАНИЕ

1. Откройте кран (горячей или холодной воды), чтобы выпустить воздух и полностью наполнить бак душа водой.
2. Когда бак наполнится водой, из насадки для душа начнет капать вода. На этом этапе можно перекрыть кран душа и подождать, пока вода в баке нагреется под воздействием солнечных лучей. Холодная вода будет доступна сразу же.

### ENG - INSTALLATION

1. Choose a location well exposed to direct sunlight near a water supply and drainage.
2. Install the shower head fastening it on the shower body.
3. On a solid support (cement, reinforced concrete, or heavy wooden base) drill 4 holes approximately of 12 mm of diameter and 70 mm of depth, using the base of the shower as a reference.
4. Put the anchors and install the solar shower vertically with the help of washers and screws.
5. Connect to the water supply. If necessary, use an adapter.
6. Ex works returns.

### 1ST USE

1. Open the tap (hot or cold water) in order to release the air contained in the shower and to allow the tank of the shower to fill completely.
2. When the water starts to drop from the head of the shower, this means that the tank of the solar shower is full. At that point, you can turn off the shower tap and wait for the water inside the tank to be heated by the sun. Cold water is immediately available.